

# ADVANCED ARCHITECTURES

---

## Quantum Computing

**Annalisa Massini**

2024-2025

*Lecture 19-20*

# References

- *Dancing with Qubits*  
Robert S. Sutor – Packt> – 2019
- *Quantum Computation and Quantum Information*  
Michael A. Nielsen & Isaac L. Chuang – Cambridge Press – 2010
- *Principles of quantum computation and Information*  
G. Benenti, G. Casati, G. Strini – World Scientific Pub – 2004
  - Ch. 3 Quantum Computation
- <https://qiskit.org/textbook/what-is-quantum.html>
- [https://en.wikipedia.org/wiki/Quantum\\_logic\\_gate](https://en.wikipedia.org/wiki/Quantum_logic_gate)

# QUANTUM SYSTEMS

---

# Quantum Computing

- **Quantum computing** exploits **quantum-mechanical effects** – in particular *superposition* and *entanglement* – to more efficiently execute a computation
- Theory of **quantum mechanics** originated from the crisis arisen in physics and ended in the early 1920s after a quarter century
- **Quantum mechanics** allows the calculation of properties and behaviour of physical systems
- **Quantum mechanics** has been an indispensable part of science ever since, and **has been applied to everything** including the *structure of the atom, nuclear fusion in stars, superconductors, the structure of DNA, and the elementary particles of nature*

# Quantum Computing

- **Quantum mechanics** is a **mathematical framework** or *set of rules* for the construction of physical theories
- For example, *quantum electrodynamics* describes with fantastic accuracy the **interaction of atoms and light**, and is built up within the framework of quantum mechanics and contains *specific rules not determined by quantum mechanics*
- **Quantum computing** basically deals with the manipulation of **quantum systems**
- The ability to control *single quantum systems* is essential to exploit the power of quantum mechanics to **quantum computing**

# Quantum Computing

- Compared to traditional digital computing, **quantum computing** offers the potential to **dramatically reduce both execution time and energy consumption**
- We will define the **common terms** and **concepts** used for quantum computing
- We will **not** discuss **how** the constructs are related to the foundations of quantum mechanics

# Quantum Computing

- In the mathematical formulation of quantum mechanics, the **state** of a **quantum mechanical system** is:
  - a **vector  $\psi$**  belonging to a (separable) **complex Hilbert space  $\mathcal{H}$**
  - **vector  $\psi$**  is postulated to be normalized under the **inner product** and it is well-defined up to a complex number of modulus 1 (the **global phase**)
  - Physical quantities of interest – position, momentum, energy, spin – are represented by **observables**, which are **Hermitian linear operators** acting on the Hilbert space
- A **complex Hilbert space** is a complex vector space with an **inner product** which is also **complete** with respect to the **norm** defined by the inner product (complete here means that every Cauchy sequence of vectors converges to a vector in the sense that the norm of differences approaches zero)
- The **inner product** between the vectors  $v = [v_0 \ \cdots \ v_{N-1}]^T$  and  $w = [w_0 \ \cdots \ w_{N-1}]^T$  ( $T$  denotes transpose so  $v$  and  $w$  are vectors column vectors) is given by  $\sum_0^{N-1} v_i w_i^*$  where  $*$  denotes the complex conjugate

# Quantum Computing

- The elementary unit of **quantum information** and the basic building block of quantum computation is the **qubit**, short for *quantum bit*
- The **qubit** can be seen as the quantum mechanical generalization of a **bit** used in classical computers
- More precisely, a **qubit** is a **two-dimensional quantum system**
- The **qubit** can be **prepared**, **manipulated** and **measured** in a controlled way
- A **quantum computer** can be seen as a **collection of  $n$  qubits** and **its wave function** (*mathematical description of the quantum state of an isolated quantum system, complex-valued*) resides in a  $2^n$ -dimensional complex Hilbert space



# Quantum Computing

- We said that the **state of any quantum system** is always represented by a **vector in a complex vector space**, the Hilbert space of wave functions
- **Quantum algorithms** are always expressible as **transformations** acting on the Hilbert vector space of wave functions
- For **quantum computing** we need only deal with **finite quantum systems**
- It suffices to consider finite dimensional complex vector spaces with an inner product

# Quantum Computing

- **Quantum state spaces and the transformations** acting on them can be described in terms of **vectors** and **matrices** respectively
- Qubit are represented using the **bra-ket** notation invented by Paul Dirac

- **ket** is for column vectors:  $|x\rangle = \begin{bmatrix} x_0 \\ x_1 \end{bmatrix}$

- **bra** is for row vectors:  $\langle x| = [x_0 \quad x_1]$

- Any ket  $|x\rangle$  has a corresponding bra  $\langle x|$
- We can **convert** between them using the **conjugate transpose** (denoted by the  $*$  or  $\dagger$  operation), that is the **vector is transposed** and the **elements are complex conjugated**

# Quantum Computing

- A fundamental feature of the quantum theory is that it usually cannot predict with certainty what will happen, but only give **probabilities**
- Mathematically, a probability is found by taking the *square of the absolute value* of a **complex number**, known as a **probability amplitude**

# QUBITS

---

# Qubit

- Just as a classical bit has a state – either 0 or 1 – a **qubit** also has a state

- Two **possible** states for a qubit are the states

$$|0\rangle = \begin{bmatrix} 1 \\ 0 \end{bmatrix} \quad |1\rangle = \begin{bmatrix} 0 \\ 1 \end{bmatrix}$$

which correspond to the states 0 and 1 for a classical bit

- The vectors  **$|0\rangle$**  and  **$|1\rangle$** 
  - encode the two basis states of a two-dimensional Hilbert vector space
  - are **normalized and mutually orthogonal quantum states** (representing the values 0 and 1 of a classical bit)
  - are known as computational basis states
  - together give the **computational basis**, and span the two-dimensional linear vector (Hilbert) space of the qubit

# Qubit

- **Qubits** are described as **mathematical objects** with certain specific properties
- **Qubits**, like bits, can be realized as actual physical systems
- Treating qubits as abstract entities allows us to construct a **general theory** of quantum computation and information which does **not depend upon a specific system for its realization**
- The difference between bits and qubits is that a **qubit** can be in a state other than  **$|0\rangle$**  or  **$|1\rangle$**
- Since the **states  $|0\rangle$**  and  **$|1\rangle$**  **form an orthonormal basis**, we can represent any 2D vector with a **linear combination** of these two states, that in quantum mechanics is denoted ***superposition***

# Qubit

- The **state of a qubit** may be expressed, using the **superposition principle**, as:  $|\psi\rangle = \alpha|0\rangle + \beta|1\rangle$

where  $\alpha$  and  $\beta$  are *complex numbers* – called **probability amplitudes** – constrained by the normalization condition

$$|\alpha|^2 + |\beta|^2 = 1 \quad \text{with} \quad |z| = \sqrt{z\bar{z}} = \sqrt{a^2 + b^2}$$

- A **probability amplitude** is a quantity which when absolute-squared gives probability, hence  $|\alpha|^2$  and  $|\beta|^2$  are probabilities
- We can also write:

$$|\psi\rangle = \alpha|0\rangle + \beta|1\rangle = \alpha \begin{bmatrix} 1 \\ 0 \end{bmatrix} + \beta \begin{bmatrix} 0 \\ 1 \end{bmatrix}$$

- In general, a **qubit is a vector** in a two-dimensional complex vector space

# Qubit

- Differently from the classical case, **we cannot examine a qubit to determine its quantum state**, that is, the values of  $\alpha$  and  $\beta$ , we can only acquire much more restricted information about the quantum state
- **Measurement** corresponds to transforming the quantum information (stored in a quantum system) into classical information
- A central principle of **quantum mechanics** is that **measurement outcomes are probabilistic**



# Qubit

- Measuring a qubit typically corresponds to reading out a classical bit, i.e. whether the qubit is 0 or 1
- When we measure a qubit we get either the result 0, with probability  $|\alpha|^2$ , or the result 1, with probability  $|\beta|^2$
- Naturally,  $|\alpha|^2 + |\beta|^2 = 1$  since the probabilities must sum to one
- The ability of a qubit to be in a superposition state runs counter to our *common sense* understanding of the physical world
- A classical bit is like a coin: either heads or tails up
- By contrast, a **qubit** can exist in a **continuum of states** between  $|0\rangle$  and  $|1\rangle$  – until *it is observed*

# Qubit

- The **inner product** (generalization of the **dot product** ) between a **bra** (row vector), given by  $\langle a| = [a_0^* \quad a_1^*]$ , and

a **ket** (column vector), given by  $|b\rangle = \begin{bmatrix} b_0 \\ b_1 \end{bmatrix}$

is:  $(\langle a|)(|b\rangle) = \langle a|b\rangle = a_0^* b_0 + a_1^* b_1$

- The **inner product** is useful to understand the **measurements**
- To find the **probability of measuring a state  $|\psi\rangle$  in the state  $|x\rangle$**  we do:

$$p(|\psi\rangle) = |\langle x|\psi\rangle|^2$$

# Qubit

- For example, exploiting the orthonormal basis given by the states  $|0\rangle$  and  $|1\rangle$  and the *superposition* of these two states we can define the qubit's *statevector*  $q_0$  and write the state in the form:

$$|q_0\rangle = \frac{1}{\sqrt{2}} |0\rangle + \frac{i}{\sqrt{2}} |1\rangle = \begin{bmatrix} \frac{1}{\sqrt{2}} \\ i \\ \frac{1}{\sqrt{2}} \end{bmatrix}$$

- In fact:
 
$$\begin{aligned}
 |q_0\rangle &= \frac{1}{\sqrt{2}} |0\rangle + \frac{i}{\sqrt{2}} |1\rangle = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \end{bmatrix} + \frac{i}{\sqrt{2}} \begin{bmatrix} 0 \\ 1 \end{bmatrix} = \\
 &= \begin{bmatrix} \frac{1}{\sqrt{2}} \\ 0 \end{bmatrix} + \begin{bmatrix} 0 \\ \frac{i}{\sqrt{2}} \end{bmatrix} = \begin{bmatrix} \frac{1}{\sqrt{2}} \\ i \\ \frac{1}{\sqrt{2}} \end{bmatrix}
 \end{aligned}$$

# Qubit

- As we said, when we measure  $|\psi\rangle$ , the probability of measuring  $|x\rangle$  is obtained by taking the **inner product** of  $|x\rangle$  and the state we are measuring, and then **squaring the magnitude**, i.e.  

$$p(|\psi\rangle) = |\langle x|\psi\rangle|^2$$
- For example, for the state  $|q_0\rangle = \frac{1}{\sqrt{2}}|0\rangle + \frac{i}{\sqrt{2}}|1\rangle$ , **the probability of measuring  $|0\rangle$  is  $1/2$**

In fact:

$$\begin{aligned}\langle 0|q_0\rangle &= \frac{1}{\sqrt{2}}\langle 0|0\rangle + \frac{i}{\sqrt{2}}\langle 0|1\rangle = \frac{1}{\sqrt{2}}\begin{bmatrix} 1 & 0 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} + \frac{i}{\sqrt{2}}\begin{bmatrix} 1 & 0 \end{bmatrix} \begin{bmatrix} 0 \\ 1 \end{bmatrix} \\ &= \frac{1}{\sqrt{2}}1 + \frac{i}{\sqrt{2}}0 = \frac{1}{\sqrt{2}}\end{aligned}$$

and

$$|\langle 0|q_0\rangle|^2 = \frac{1}{2}$$

# Qubit

- On the other hand, if we want the probabilities to add up to 1 (which they should), we need to **ensure that the statevector is properly normalized**, that is **its magnitude to be 1**:

$$\langle\psi|\psi\rangle=1$$

- Thus, if  $|\psi\rangle = \alpha|0\rangle + \beta|1\rangle$  then the normalization condition is

$$|\alpha|^2 + |\beta|^2 = 1$$

- And we obtain the factors of  $\sqrt{2}$  we saw before
- Notice that, **nowhere does it tell us that  $|x\rangle$  can only be either  $|0\rangle$  or  $|1\rangle$**
- The measurements we have considered so far are in fact only one of an infinite number of possible ways to measure a qubit

# Qubit

- Measuring the state  $|0\rangle$  or the state  $|1\rangle$  will give us the output with certainty
- Notice that if we consider a **state such as**  $\begin{bmatrix} 0 \\ i \end{bmatrix} = i|1\rangle$  and apply the **measurement** rule we obtain:

$$|\langle x | (i|1\rangle)\rangle|^2 = |i\langle x | 1\rangle|^2 = |i|^2 |\langle x | 1\rangle|^2 = |\langle x | 1\rangle|^2$$

- The **factor  $i$  disappears** once we take the magnitude of the complex number
- This effect is completely independent of the measured state  $|x\rangle$
- The **probability for the state  $i|1\rangle$  is identical to that for  $|1\rangle$**

# Qubit

- Since measurements are the only way we can extract any information from a qubit, this implies that **the two states  $|1\rangle$  and  $i|1\rangle$  are equivalent** in all ways that are physically relevant
- More generally, we refer to **any overall factor  $\gamma$**  on a state for which  **$|\gamma|^2 = 1$**  as ***global phase***
- States that **differ** only by a **global phase** (such as  $|a\rangle$  and  $\gamma |a\rangle$ ) are ***physically indistinguishable***, in fact:

$$|\langle x | (\gamma |a\rangle)|^2 = |\gamma \langle x | a \rangle|^2 = |\langle x | a \rangle|^2$$

# Qubit

- We know that the amplitudes contain information about the probability of finding the qubit in a specific state
- Once we have measured the qubit, we know with certainty what the state of the qubit is

## Observation

- If we measure a qubit in the state  $|q\rangle$  and find it in the state  $|0\rangle$
- Then, if we measure again, there is a 100% chance of finding the qubit in the state  $|0\rangle$
- This means **the act of measuring changes the state of our qubits**

$$|\psi\rangle = \begin{bmatrix} \alpha \\ \beta \end{bmatrix} \xrightarrow{\text{measure } |0\rangle} |\psi\rangle = |0\rangle = \begin{bmatrix} 1 \\ 0 \end{bmatrix}$$
- We refer to this as **collapsing the state of the qubit**



# Qubit

- If we constantly measure each of our qubits to keep track of their value at each point in a computation, they would always simply be in a well-defined state of either  $|0\rangle$  or  $|1\rangle$  and they would be no different from classical bits
- To achieve **truly quantum computation** we must allow the qubits to explore more complex states
- **Measurements** are therefore only used when we need to extract an output, and are all placed at the **end of a quantum circuit**
- In general, a quantum computation is composed of **three steps**:
  - **Preparation** of the input state
  - **Implementation** of the **unitary** transformation acting on this state
  - **Measurement** of the output state

# Qubit

- Since a **global phase** for a state never has any observable consequences, the states  $|\psi\rangle$  and  $e^{i\gamma}|\psi\rangle$  both produce the same observable consequences
- In fact, **all complex number with absolute value 1** can be expressed according to Euler's formula as  $e^{i\gamma} = \cos \gamma + i \sin \gamma$  and it holds that  $|e^{i\gamma}| = 1$  since the absolute value of a complex number  $z = a + ib$  is:  $|z| = \sqrt{z\bar{z}} = \sqrt{a^2 + b^2}$ ,
- It is useful to always choose the global phase such that the **coefficient of the ket  $|0\rangle$**  is **real** and **non-negative**:
- We can express  $\alpha$  and  $\beta$  in polar form:  

$$|\psi\rangle = \alpha|0\rangle + \beta|1\rangle = r_1 e^{i\varphi_1} |0\rangle + r_2 e^{i\varphi_2} |1\rangle = e^{i\varphi_1} (r_1 |0\rangle + r_2 e^{i(\varphi_2 - \varphi_1)} |1\rangle)$$
- That is the same as:  $r_1 |0\rangle + r_2 e^{i(\varphi_2 - \varphi_1)} |1\rangle$

# Qubit

- Hence the state of a single qubit  $|\psi\rangle$  can be represented by

$$|\psi\rangle = r_1|0\rangle + r_2e^{i\varphi}|1\rangle$$

- with:

- $r_1, r_2 \in \mathbb{R}, r_1^2 + r_2^2 = 1$  and  $0 \leq \varphi < 2\pi$

- Moreover, we can find  $0 \leq \theta < \pi$  with  $r_1 = \cos\frac{\theta}{2}$  and  $r_2 = \sin\frac{\theta}{2}$  so that:


$$|\psi\rangle = \cos\frac{\theta}{2} |0\rangle + e^{i\varphi} \sin\frac{\theta}{2} |1\rangle$$

# Qubit

- We can describe the **state of any qubit** using the two **variables  $\varphi$  and  $\theta$** :

$$|\psi\rangle = \cos\frac{\theta}{2}|0\rangle + e^{i\varphi}\sin\frac{\theta}{2}|1\rangle \quad \text{with } 0 \leq \theta \leq \pi, \quad 0 \leq \varphi < 2\pi$$

- If we interpret
  - $\theta$  and  $\varphi$  as spherical coordinates
  - with radius  $r = 1$  (since the magnitude of the qubit state is 1)we can plot any single qubit state on the surface of a sphere, known as the **Bloch sphere**

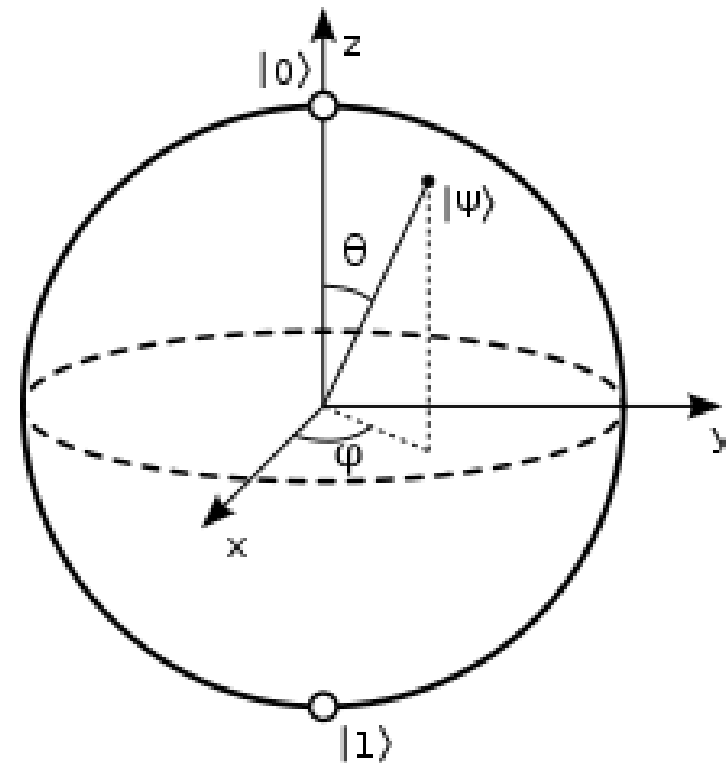


# Qubit

- The **Bloch sphere** can be embedded in a **three-dimensional space of Cartesian coordinates**:


$$\begin{cases} x = \cos\phi \sin\theta \\ y = \sin\phi \sin\theta \\ z = \cos\theta \end{cases}$$

- By definition, a **Bloch vector** is a vector whose components  $(x, y, z)$  single out a point on the Bloch sphere
- Therefore, each Bloch vector must satisfy the normalization condition  $x^2 + y^2 + z^2 = 1$

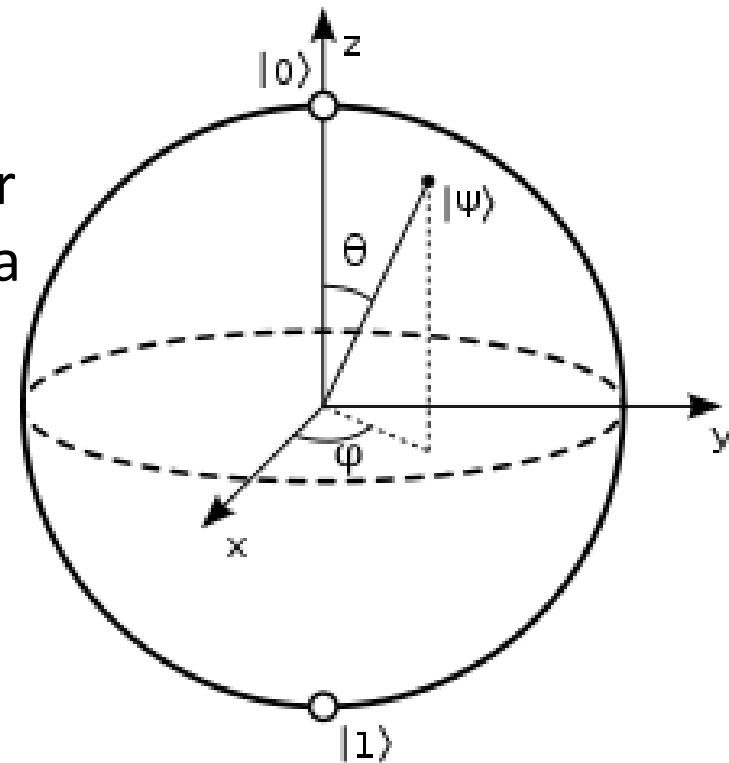


# Qubit

- To avoid confusing the **qubit statevector** with its **Bloch vector** remember that:
  - The **statevector** is the vector that holds the amplitudes for the two states our qubit can be in
  - The **Bloch vector** is a visualisation method that maps the 2D, complex statevector onto real, 3D space

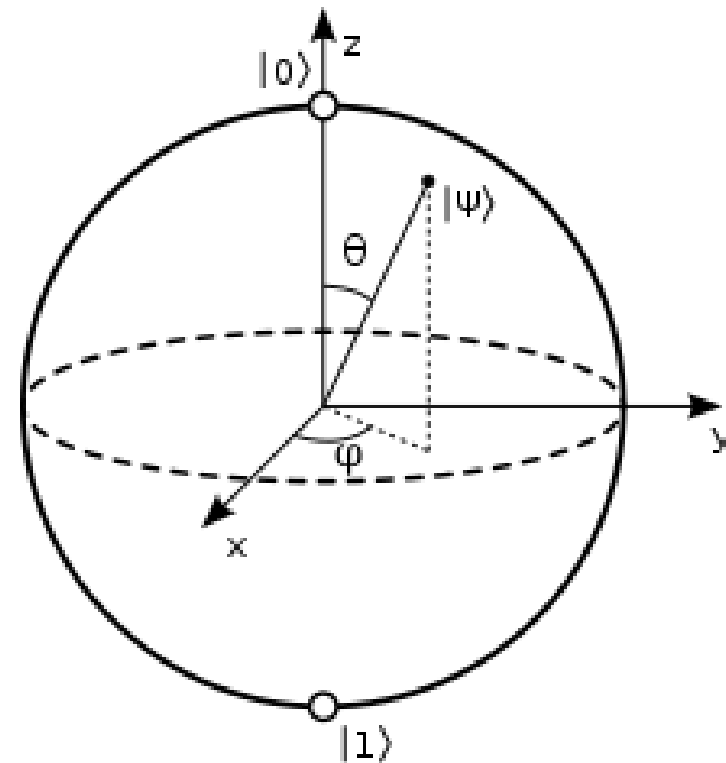

# Qubit


- For the generic state  $|\psi\rangle$  we can write:

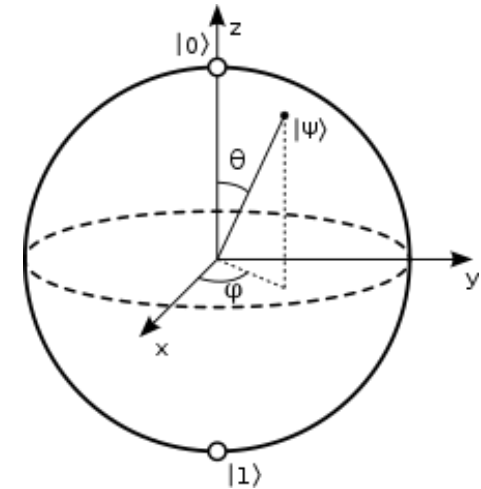

$$\begin{aligned}
 |\psi\rangle &= \cos\frac{\theta}{2}|0\rangle + e^{i\phi}\sin\frac{\theta}{2}|1\rangle = \begin{bmatrix} \cos\frac{\theta}{2} \\ e^{i\phi}\sin\frac{\theta}{2} \end{bmatrix} = \begin{bmatrix} \sqrt{\frac{1+\cos\theta}{2}} \\ (\cos\phi + i\sin\phi)\sqrt{\frac{1-\cos\theta}{2}} \end{bmatrix} \\
 &= \begin{bmatrix} \sqrt{\frac{1+\cos\theta}{2}} \\ (\cos\phi + i\sin\phi)\sqrt{\frac{1-\cos^2\theta}{2(1+\cos\theta)}} \end{bmatrix} = \begin{bmatrix} \sqrt{\frac{1+\cos\theta}{2}} \\ \frac{\cos\phi\sin\theta + i\sin\phi\sin\theta}{\sqrt{2(1+\cos\theta)}} \end{bmatrix} = \begin{bmatrix} \sqrt{\frac{1+z}{2}} \\ \frac{x+iy}{\sqrt{2(1+z)}} \end{bmatrix}
 \end{aligned}$$

# Qubit

- Note that single qubit states  $|0\rangle$  and  $|1\rangle$  (which are orthogonal) are not orthogonal vectors on the Bloch sphere, i.e. as points along the positive and the negative **z axis** represented as  $\theta = 0$  and  $\theta = \pi$

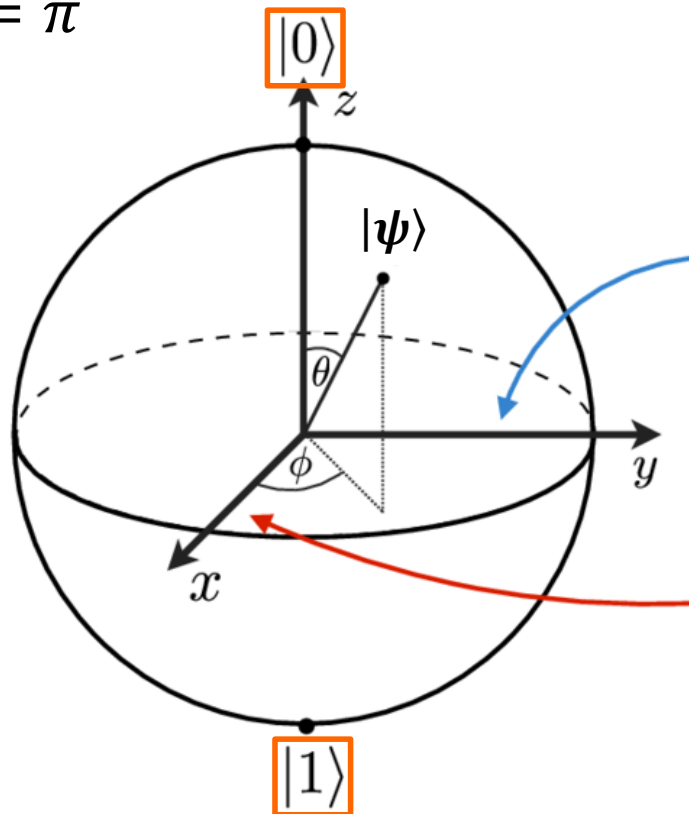

$$|i+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + i|1\rangle)$$

$$|i-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - i|1\rangle)$$


$$|+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + |1\rangle)$$

$$|-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - |1\rangle)$$



# Qubit

- Apart from canonical states  $|0\rangle$  and  $|1\rangle$  which permit to describe the qubit state with a linear combinations of two vectors lying on the z-axis, there are **other four remarkable states** that lie along the **x and y axes**

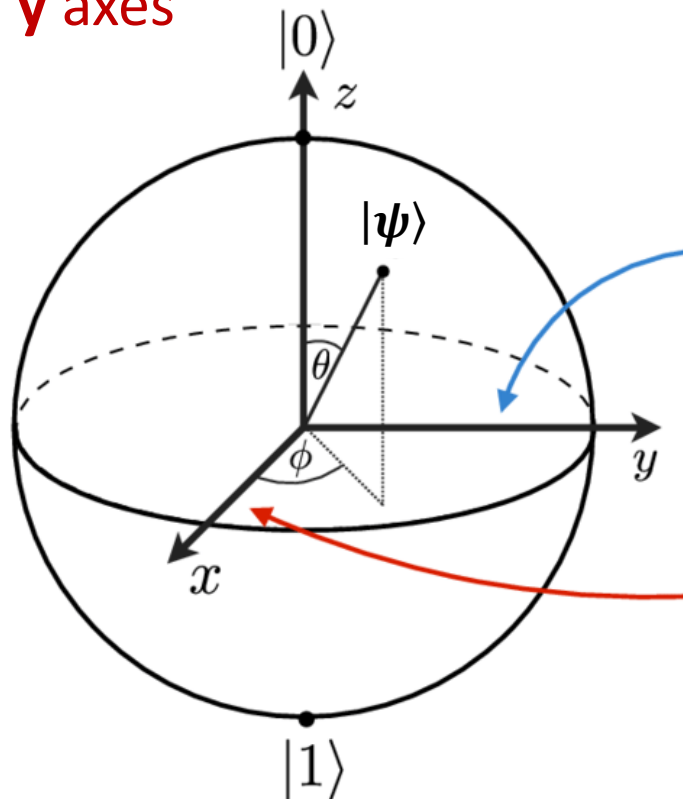

$$|i+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + i|1\rangle)$$

$$|i-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - i|1\rangle)$$

$$|+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + |1\rangle)$$


$$|-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - |1\rangle)$$

# Qubit

- Hence, the Z-basis is not the only basis we can use
- The **X-basis** is given by the two **vectors**  $|+\rangle$  and  $|-\rangle$ :

$$|+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + |1\rangle) = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 1 \end{bmatrix}$$

$$|-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - |1\rangle) = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ -1 \end{bmatrix}$$

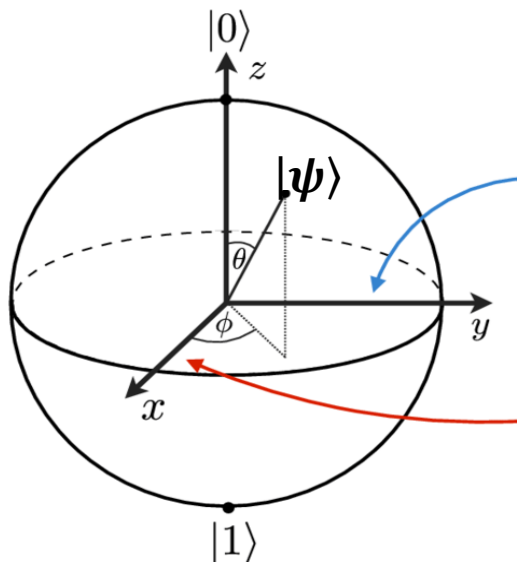

$$|i+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + i|1\rangle)$$

$$|i-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - i|1\rangle)$$

$$|+\rangle = \frac{1}{\sqrt{2}}(|0\rangle + |1\rangle)$$


$$|-\rangle = \frac{1}{\sqrt{2}}(|0\rangle - |1\rangle)$$

# Qubit

- Another (less commonly used) basis is


$$|i+\rangle = |\psi\rangle = \frac{1}{\sqrt{2}}(|0\rangle + i|1\rangle) = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ i \end{bmatrix}$$

$$|i-\rangle = |\bar{\psi}\rangle = \frac{1}{\sqrt{2}}(|0\rangle - i|1\rangle) = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ -i \end{bmatrix}$$

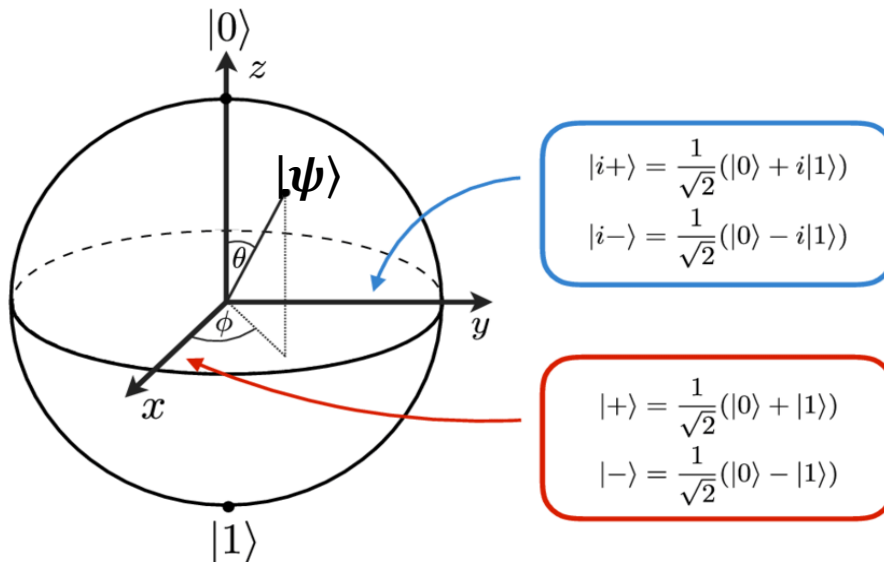

# Qubit

- Summing up, we have three pairs of basis elements:
- $\{|0\rangle, |1\rangle\}$  Computational basis (Bloch sphere Z-axis)
- $\{|+\rangle, |-\rangle\}$  Hadamard basis (Bloch sphere X-axis)
- $\{|i+\rangle, |i-\rangle\} = \{|i\rangle, |-i\rangle\}$  Circular basis (Bloch sphere Y-axis)

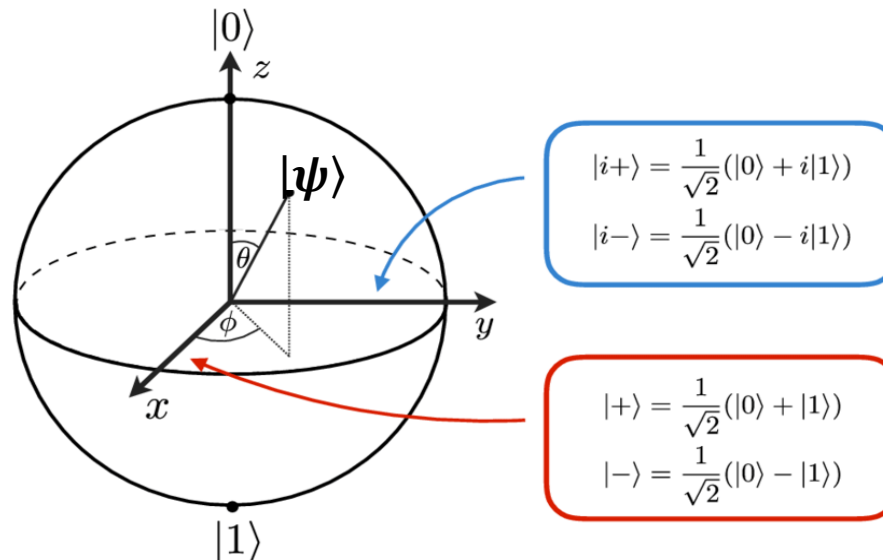

# MULTI-QUBIT

---

# Multi-Qubit

- The mathematical structure of a qubit generalizes to **higher dimensional quantum systems**
- The state of any quantum system is a normalized vector (a vector of norm one) in a complex vector space
  - The normalization is necessary to ensure that the total probability of all the outcomes of a measurement sum to one
- The joint state of a system of qubits is described using an operation known as the **tensor product**,  $\otimes$ , that mathematically is the **same as taking the Kronecker product** of their vectors

$$|a\rangle = \begin{bmatrix} a_0 \\ a_1 \end{bmatrix} \quad |b\rangle = \begin{bmatrix} b_0 \\ b_1 \end{bmatrix} \quad |ba\rangle = |b\rangle \otimes |a\rangle = \begin{bmatrix} b_0 \times \begin{bmatrix} a_0 \\ a_1 \end{bmatrix} \\ b_1 \times \begin{bmatrix} a_0 \\ a_1 \end{bmatrix} \end{bmatrix} = \begin{bmatrix} b_0 a_0 \\ b_0 a_1 \\ b_1 a_0 \\ b_1 a_1 \end{bmatrix}$$

# Multi-Qubit

- A single **bit** has *two possible states* and a **qubit** state has *two complex amplitudes*
- Similarly, **two bits** have *four possible states* (00, 01, 10, 11) and the state of **two qubits** requires *four complex amplitudes*
- These amplitudes are stored in a 4D-vector:

$$|a\rangle = a_{00}|00\rangle + a_{01}|01\rangle + a_{10}|10\rangle + a_{11}|11\rangle = \begin{bmatrix} a_{00} \\ a_{01} \\ a_{10} \\ a_{11} \end{bmatrix}$$

- The **rules of measurement** still work in the same way:

$$p(|00\rangle) = |\langle 00|a\rangle|^2 = |a_{00}|^2$$

- And the same **normalisation condition** holds:

$$|a_{00}|^2 + |a_{01}|^2 + |a_{10}|^2 + |a_{11}|^2 = 1$$

# Multi-Qubit

- If we have  $n$  qubits, we will need to keep track of  $2^n$  complex amplitudes
- Vectors representing more qubits grow exponentially with the number of qubits
- This is the reason quantum computers with large numbers of qubits are so difficult to simulate
- A modern laptop can easily simulate a general quantum state of around 20 qubits, but simulating 100 qubits is too difficult for the largest supercomputers



# Multi-Qubit

- The **state of any  $n$  qubit system** can be written as a normalized linear **combination of the  $2^n$  bit-string states** (states formed by the tensor products of  $|0\rangle$ 's and  $|1\rangle$ 's)
- The orthonormal basis formed by the  $2^n$  bit-string states is called the **computational basis**
- A **system of two qubits**, e.g.  $|\psi_1\psi_2\rangle$ , whose complete state is the tensor product of two different single qubit states, e.g.  $|\psi_1\rangle = (\alpha_0|0\rangle + \alpha_1|1\rangle)$  and  $|\psi_2\rangle = (\beta_0|0\rangle + \beta_1|1\rangle)$ , can be described by an equation in the form

$$\begin{aligned} |\psi_1\psi_2\rangle &= \alpha_0\beta_0|00\rangle + \alpha_0\beta_1|01\rangle + \alpha_1\beta_0|10\rangle + \alpha_1\beta_1|11\rangle = \\ &= a_{00}|00\rangle + a_{01}|01\rangle + a_{10}|10\rangle + a_{11}|11\rangle \end{aligned}$$

# Multi-Qubit

- It is possible for two qubits to be in a state that **cannot** be written as the **tensor product** of two single qubit states
- States of a system of which **cannot** be expressed as a tensor product of states of its individual subsystems, that is are not separable, are called **entangled states**
- Instead, states separable into the tensor product of states from the constituent subsystems are referred to as **separable states**

# Multi-Qubit

## Exercises

1. Write down the kronecker product of the qubits:
  - a)  $|0\rangle \otimes |1\rangle$
  - b)  $|0\rangle \otimes |+\rangle$
  - c)  $|+\rangle \otimes |1\rangle$
  - d)  $|1\rangle \otimes |+\rangle$
  - e)  $|-\rangle \otimes |+\rangle$
2. Write the state:  $|\psi\rangle = \frac{1}{\sqrt{2}}|00\rangle + \frac{i}{\sqrt{2}}|01\rangle$  as two separate qubits

# Multi-Qubit

- The state  $\frac{1}{\sqrt{2}}(|00\rangle + |11\rangle)$  is an example of a quantum state that **cannot be described** in terms of the state of each of its components (qubits) separately

- In other words, we cannot find  $a_1, a_2, b_1, b_2$  such that

$$(a_1|0\rangle + b_1|1\rangle) \otimes (a_2|0\rangle + b_2|1\rangle) = \frac{1}{\sqrt{2}}|00\rangle + \frac{1}{\sqrt{2}}|11\rangle$$

since

$$\begin{aligned} & (a_1|0\rangle + b_1|1\rangle) \otimes (a_2|0\rangle + b_2|1\rangle) \\ &= a_1a_2|00\rangle + a_1b_2|01\rangle + b_1a_2|10\rangle + b_1b_2|11\rangle \end{aligned}$$

and  $a_1b_2 = 0$  implies  $a_1a_2 = 0$  or  $b_1b_2 = 0$

# Multi-Qubit

- **Bell states** are a very famous example of **entangled states**:

$$|\psi_1\rangle = \frac{|00\rangle + |11\rangle}{\sqrt{2}}$$

$$|\psi_2\rangle = \frac{|00\rangle - |11\rangle}{\sqrt{2}}$$

$$|\psi_3\rangle = \frac{|01\rangle + |10\rangle}{\sqrt{2}}$$

$$|\psi_4\rangle = \frac{|01\rangle - |10\rangle}{\sqrt{2}}$$

- Take as example  $|\psi_1\rangle$ :
  - If the first qubit is measured, and the result is  $|0\rangle$ , then also the measurement of the second qubit will give  $|0\rangle$  as a result
- In general, for entangled states, it holds that measured one of the two qubits, also the state of the other qubit is well determined

# Multi-Qubit

- There exist **entangled states** also for **three** and **more qubits**
- Entanglement is a form of quantum mechanical correlation which tells that the state of a single quantum system could depend **instantly** on the state of other quantum systems
- In other words, entanglement tells that not always a complex system can be understood in terms of its constituents
- **Without** the existence of **entangled states**, **quantum computers would be no more powerful** than their classical counterparts
- Entanglement makes it possible to create a complete  $2^n$  dimensional complex vector space to do computations in, using just  $n$  physical qubits

# QUANTUM LOGIC GATES

---

# Quantum logic gates

- A **quantum logic gate** is a basic quantum circuit operating on a small number of qubits
- Quantum gates are the building blocks of **quantum circuits**, like classical logic gates are for conventional digital circuits
- **Quantum gates** are **unitary operators**, and are described as unitary matrices relative to some basis
  - An (invertible) complex square matrix  $U$  is called **unitary** if its **adjoint** (conjugate transpose) and its **inverse** coincide, i.e.:

$$U^\dagger U = U U^\dagger = I$$

where  $I$  is the identity matrix



# Quantum logic gates

- **Quantum gates** can be used to manipulate the state of one or more qubits by **changing the state vector**  $|\psi\rangle$ , with the **normalization condition** continuing to be valid
- **Quantum gates must be reversible**, i.e. when an operator is applied to a given state, it must be always possible to reconstruct the input state starting from the output
- A gate which acts on  **$n$  qubits** is represented by a  **$2^n \times 2^n$  unitary matrix**, and the set of all such gates with the group operation of matrix multiplication is the symmetry group  $U(2^n)$

# Quantum logic gates

- To see the **effect of a gate on a qubit**, we simply **multiply** the **qubit's statevector** by the gate represented as a **matrix  $2 \times 2$** , whereas for  $n$  qubits we have a statevector of size  $2^n$  and a matrix (gate) of size  $2^n \times 2^n$
- The most common quantum gates operate on vector spaces of **one or two qubits**, just like the common classical logic gates operate on one or two bits
- There are two different conventions regarding the order in which the qubits in a quantum circuit have to be read:
  - The **traditional notation** where the **top** qubit is the **most** significant one
  - The **IBM notation** where the **top** qubit is the **least** significant one

# ONE QUBIT GATES

---

# One-Qubit gates: the Pauli gates

## The Pauli gates: X-gate

- The **X-gate** is the quantum equivalent of the **classical not gate**
- It is able to flip the  $|0\rangle$  state in  $|1\rangle$  state (and vice versa)

- The **X-gate** is represented by the **Pauli-X matrix**:

$$X = \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} = |0\rangle\langle 1| + |1\rangle\langle 0|$$

- The X-gate switches the amplitudes of the states  $|0\rangle$  and  $|1\rangle$ :

$$X|0\rangle = \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} = \begin{bmatrix} 0 \\ 1 \end{bmatrix} = |1\rangle$$


- Because of its effect on a qubit, it is also called **bit-flip** gate

# One-Qubit gates: the Pauli gates


## The Pauli gates: X-gate

- In general: 
$$|\psi'\rangle = X|\psi\rangle = \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} \begin{bmatrix} \alpha \\ \beta \end{bmatrix} = \begin{bmatrix} \beta \\ \alpha \end{bmatrix}$$

- In quantum circuits, the X-gate is represented as



- By looking at the **Bloch sphere**, it is possible to interpret the **action of X gate** in terms of a **rotation around the x-axis of  $\pi$  radians ( $180^\circ$ )**
- The **poles are flipped** and points in the lower hemisphere move to the upper and vice versa

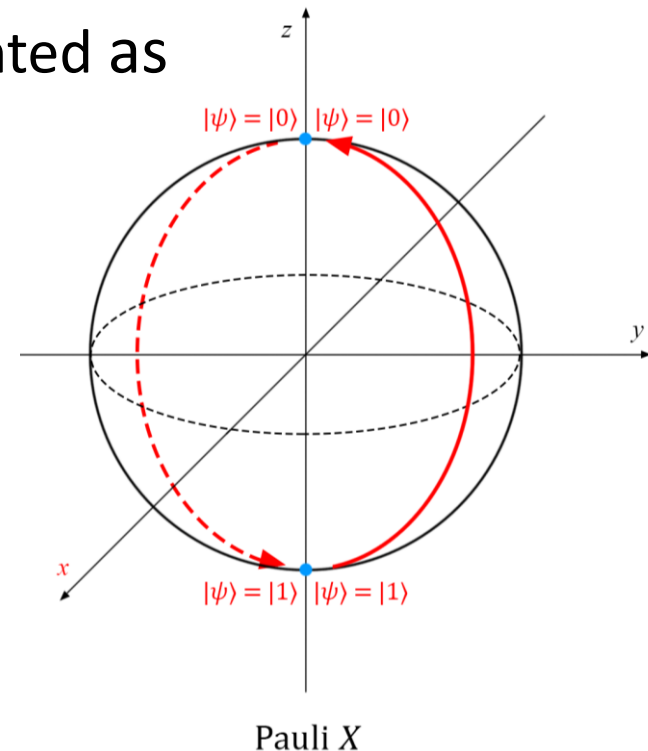

# One-Qubit gates: the Pauli gates

## The Pauli gates: Z-gate

- The **Z-gate** is able to swap  $|+\rangle$  and  $|-\rangle$  state as well as  $|i\rangle$  and  $|-i\rangle$
- The **Z-gate** is represented by the **Pauli-Z matrix**:

$$Z = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} = |0\rangle\langle 0| - |1\rangle\langle 1|$$


- Z-gate do not change the probabilities of measuring  $|0\rangle$  and  $|1\rangle$ 
  - $Z|0\rangle = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \end{bmatrix} = |0\rangle$  and  $Z|1\rangle = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \begin{bmatrix} 0 \\ 1 \end{bmatrix} = -\begin{bmatrix} 0 \\ 1 \end{bmatrix} = -|1\rangle$
  - the states  $|0\rangle$  and  $|1\rangle$  are the two *eigenstates* of the Z-gate
  - In fact, the **computational basis** formed by the states  $|0\rangle$  and  $|1\rangle$  is often called the Z-basis

# One-Qubit gates: the Pauli gates


## The Pauli gates: Z-gate

- In general: 
$$|\psi'\rangle = Z|\psi\rangle = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \begin{bmatrix} \alpha \\ \beta \end{bmatrix} = \begin{bmatrix} \alpha \\ -\beta \end{bmatrix}$$

- In quantum circuits, the Z-gate is represented as



- By looking at the Bloch sphere, the action of this gate is a rotation around the  $z$ -axis of  $\pi$  radians ( $180^\circ$ )
- It is also called **phase-flip** gate
- It has no effect on  $|0\rangle$  but transforms  $|1\rangle$  to  $-|1\rangle$  which are the same point  $|1\rangle$  on the Bloch sphere

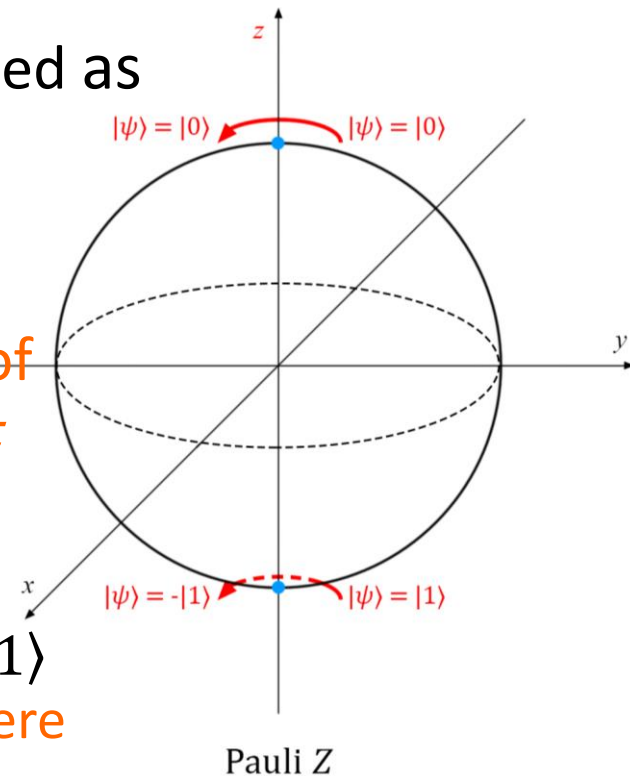

# One-Qubit gates: the Pauli gates

## The Pauli gates: Y-gate

- The **Y-gate** is represented by the **Pauli-y matrix**:

$$Y = \begin{bmatrix} 0 & -i \\ i & 0 \end{bmatrix} = -i|0\rangle\langle 1| + i|1\rangle\langle 0|$$

- The final state has both a different relative phase and a different amplitude probability
- Since its action on the qubit state corresponds to the one that can be achieved by combining a Pauli X gate and a Pauli Z gate, it is usually called **bit-phase-flip** gate




# One-Qubit gates: the Pauli gates

## The Pauli gates: Y-gate

- In general:  $|\psi'\rangle = Y|\psi\rangle = \begin{bmatrix} 0 & -i \\ i & 0 \end{bmatrix} \begin{bmatrix} \alpha \\ \beta \end{bmatrix} = \begin{bmatrix} -i\beta \\ i\alpha \end{bmatrix} = -i \begin{bmatrix} \beta \\ -\alpha \end{bmatrix}$
- In quantum circuits, the X-gate is represented as



- By looking at the **Bloch sphere**, it is possible to interpret the **action of this gate** in terms of a **rotation around the y-axis of  $\pi$  radians ( $180^\circ$ )**

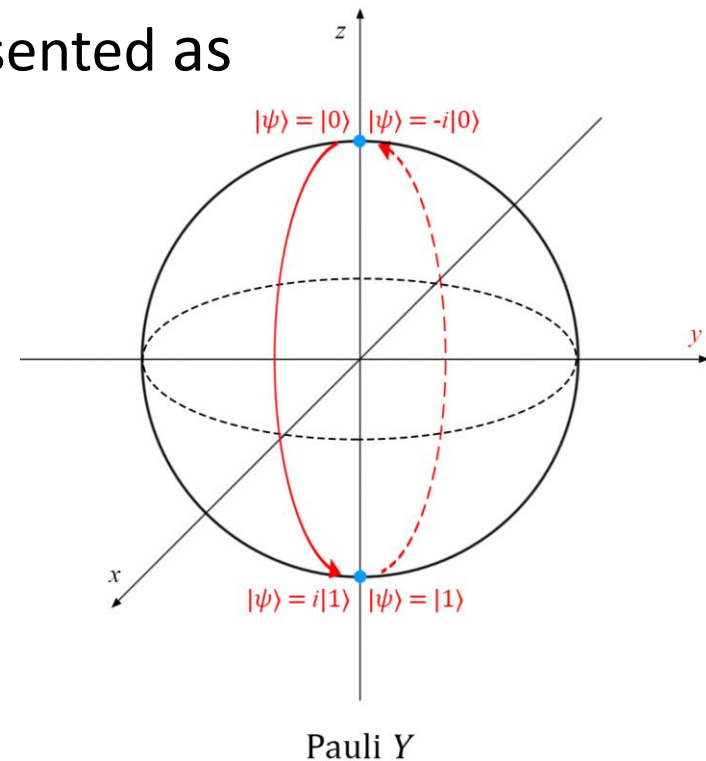


# One-Qubit gates: the Hadamard Gate

- The **Hadamard gate** (H-gate) is a fundamental quantum gate
- It allows us to move away from the poles of the Bloch sphere and create a superposition of  $|0\rangle$  and  $|1\rangle$

- It has the matrix: 
$$H = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix}$$

- In quantum circuits, the H-gate is represented as

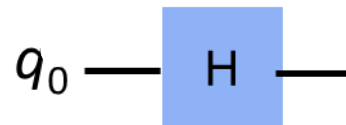

- We can see that the H-gate performs the transformations:

$$H|0\rangle = |+\rangle \text{ and } H|1\rangle = |-\rangle$$

- The **action of Hadamard gate** is a **rotation** around the **y-axis of  $\pi/2$  radians**, followed by a **rotation** around the **x-axis of  $\pi$  radians**

# One-Qubit gates

## Exercises

- Verify that all gates introduced so far are their **own inverse**
  - Note that gates introduced so far are **unitary** matrices, then the inverse is equal to the conjugate transpose
  - Note also that if a complex square matrix is equal to its own conjugate transpose, then it is a **Hermitian matrix** (or self-adjoint matrix)
- Verify that you can **create an X-gate** by sandwiching a Z-gate between two H-gates, that is  $X = HZH$ 
  - Starting in the Z-basis, the H-gate switches our qubit to the X-basis, the Z-gate performs a NOT in the X-basis, and the final H-gate returns our qubit to the Z-basis

# One-Qubit gates: the Pauli gates

## Exercises - solutions

- Verifying  $X, Y, Z, H$  are their own inverse

$$\bullet \quad XX = \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}$$

$$\bullet \quad YY = \begin{bmatrix} 0 & -i \\ i & 0 \end{bmatrix} \begin{bmatrix} 0 & -i \\ i & 0 \end{bmatrix} = \begin{bmatrix} -i^2 & 0 \\ 0 & -i^2 \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}$$

$$\bullet \quad ZZ = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}$$

$$\bullet \quad HH = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} = \frac{1}{2} \begin{bmatrix} 2 & 0 \\ 0 & 2 \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}$$

- Verifying  $HZH$  behaves like an X-gate

$$\bullet \quad HZH = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} = \frac{1}{2} \begin{bmatrix} 0 & 2 \\ 2 & 0 \end{bmatrix} = \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} = X$$

# One-Qubit gates: Arbitrary rotations

- There are three gates that allow to do an **arbitrary rotation** around the  $x$ ,  $y$  and  $z$  axis, respectively
- These operators are  $R_x$ ,  $R_y$  and  $R_z$ , and are defined as:

$$R_x(\theta) = \begin{bmatrix} \cos \frac{\theta}{2} & -i \sin \frac{\theta}{2} \\ i \sin \frac{\theta}{2} & \cos \frac{\theta}{2} \end{bmatrix} \quad R_y(\theta) = \begin{bmatrix} \cos \frac{\theta}{2} & -\sin \frac{\theta}{2} \\ \sin \frac{\theta}{2} & \cos \frac{\theta}{2} \end{bmatrix} \quad R_z(\varphi) = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\varphi} \end{bmatrix}$$

- Notice that while  **$R_x$  and  $R_y$  change the probabilities** of the system states,  $R_z$  does not (i.e. the probability of measuring  $|0\rangle$  rather than  $|1\rangle$  remains the same)
- What  **$R_z$  changes is the relative phase of the qubit**

# One-Qubit gates

## Exercises

- Apply  $R_x(\theta) = \begin{bmatrix} \cos \frac{\theta}{2} & -i \sin \frac{\theta}{2} \\ i \sin \frac{\theta}{2} & \cos \frac{\theta}{2} \end{bmatrix}$  and  $R_y(\theta) = \begin{bmatrix} \cos \frac{\theta}{2} & -\sin \frac{\theta}{2} \\ \sin \frac{\theta}{2} & \cos \frac{\theta}{2} \end{bmatrix}$

to  $|0\rangle$ ,  $|1\rangle$  and  $|q_0\rangle = \frac{1}{\sqrt{2}}|0\rangle + \frac{i}{\sqrt{2}}|1\rangle$  and verify that the probabilities of the state change

- Apply  $R_z(\varphi) = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\varphi} \end{bmatrix}$  to  $|0\rangle$ ,  $|1\rangle$  and  $|q_0\rangle = \frac{1}{\sqrt{2}}|0\rangle + \frac{i}{\sqrt{2}}|1\rangle$  and verify that the probabilities of the state do not change

# One-Qubit gates: Arbitrary rotations

- $R_Z$  performs a rotation of  $\varphi$  around the Z-axis direction and changes the relative phase of the qubit
- $R_Z$  is a **parametrized** gate and is also called **P-gate**
- It needs a real number  $\varphi$  to tell it exactly what to do
- Notice that the Z-gate, that is  $Z = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix}$ , is a special case of the **P-gate**  $P = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\varphi} \end{bmatrix}$ , with  $\varphi = \pi$ :

$$Z = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\pi} \end{bmatrix}$$

# One-Qubit gates: the S-gate

- The **S-gate**, also known as  $\sqrt{Z}$ -gate, is a **P-gate** with  $\varphi = \pi/2$  around the Z-axis direction
- The **S-gate** does a quarter-turn around the Bloch sphere

- The matrix is: 
$$S = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{2}} \end{bmatrix}$$

- The name  $\sqrt{Z}$ -gate is due to the fact that **two successively applied S-gates** has the same effect as one Z-gate:

$$\begin{aligned} SS|q\rangle &= \begin{bmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{2}} \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{2}} \end{bmatrix} |q\rangle = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\pi} \end{bmatrix} |q\rangle = \begin{bmatrix} 1 & 0 \\ 0 & -1 \end{bmatrix} |q\rangle \\ &= Z|q\rangle \end{aligned}$$



# One-Qubit gates: the S-gate

- Unlike other gates introduced so far, the **S-gate is not its own inverse**
- We can have  $S^\dagger$ -gate (or  $\sqrt{Z}^\dagger$ -gate)
- The  $S^\dagger$ -gate is clearly a P-gate with  $\varphi = -\pi/2$
- The matrix is:
- It holds

$$S^\dagger = \begin{bmatrix} 1 & 0 \\ 0 & e^{-i\frac{\pi}{2}} \end{bmatrix}$$

$$SS^\dagger = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{2}} \end{bmatrix} \begin{bmatrix} 1 & 0 \\ 0 & e^{-i\frac{\pi}{2}} \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & e^{i(\frac{\pi}{2}-\frac{\pi}{2})} \end{bmatrix} = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}$$

# One-Qubit gates: the T-gate

- The **T-gate** is a **P-gate** with  $\varphi = \pi/4$
- The matrices for  $T$  and  $T^\dagger$  are:

$$T = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{4}} \end{bmatrix} \quad T^\dagger = \begin{bmatrix} 1 & 0 \\ 0 & e^{-i\frac{\pi}{4}} \end{bmatrix}$$

- As with the S-gate, the T-gate is sometimes also denoted as the  $\sqrt[4]{Z}$ -gate

# One-Qubit gates: the U-gate

- The **U-gate** is the most general of all single-qubit quantum gates
- It is a parametrised gate of the form:

$$U(\theta, \phi, \lambda) = \begin{bmatrix} \cos\left(\frac{\theta}{2}\right) & -e^{i\lambda} \sin\left(\frac{\theta}{2}\right) \\ e^{i\phi} \sin\left(\frac{\theta}{2}\right) & e^{i(\phi+\lambda)} \cos\left(\frac{\theta}{2}\right) \end{bmatrix}$$

- Every gate could be specified as  $U(\theta, \phi, \lambda)$ , but it is unusual to see this in a circuit diagram
- As an example, we see the **U-gate** for representing the **H-gate** and **P-gate** respectively

$$U\left(\frac{\pi}{2}, 0, \pi\right) = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \quad \text{and} \quad U(0, 0, \lambda) = \begin{bmatrix} 1 & 0 \\ 0 & e^{i\lambda} \end{bmatrix} = P$$

# MULTI-QUBIT GATES


---

# Multi-Qubit gates

- Among the **multiple-qubit gates**, there is a wide range of gates which is based on the same principle: **controlled gates**
- A given number of **control qubits** decide if a **given operation must be performed** on another set of qubits or not
- In the case of a two-qubit, there is one **control** qubit and one **target** qubit

# Multi-Qubit gates: CNOT gate


- An important two-qubit gate is the **CNOT-gate**
- It is a conditional gate that performs an X-gate on the second qubit, **target** bit, if the state of the first qubit, **control** bit is  **$|1\rangle$**
- In the picture **q1 is the control qubit** and **q0 is the target qubit**

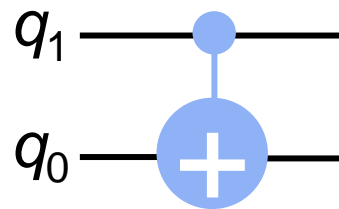

# Multi-Qubit gates: CNOT gate

- The matrix of the CNOT gate is 
$$\begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 1 & 0 \end{bmatrix}$$
- This matrix **swaps the amplitudes of  $|10\rangle$  and  $|11\rangle$**  in the statevector:


$$|a\rangle = \begin{bmatrix} a_{00} \\ a_{01} \\ a_{10} \\ a_{11} \end{bmatrix} \quad \text{CNOT}|a\rangle = \begin{bmatrix} a_{00} \\ a_{01} \\ a_{11} \\ a_{10} \end{bmatrix}$$

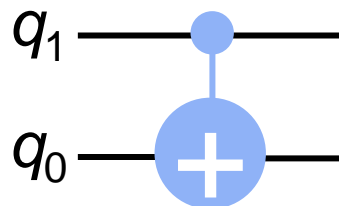

# Multi-Qubit gates: CNOT gate

- The CNOT, or **controlled-NOT**, or **Feynman gate** is a **reversible** gate and perform **the XOR**, as shown in the true table below

$a$	$b$	$a'$	$b'$
0	0	0	0
0	1	0	1
1	0	1	1
1	1	1	0

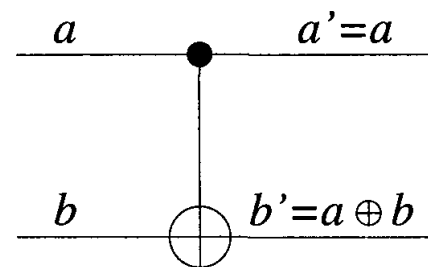


- The **second bit**, or target bit, is flipped if and only if the first bit is set to one and therefore  $b' = a \oplus b$



# Multi-Qubit gates: CNOT gate

- Note that, if we set the **target bit to 0**, the CNOT gates becomes the **FANOUT gate**:  $(a, 0) \rightarrow (a, a)$

$a$	$b$	$a'$	$b'$
0	0	0	0
0	1	0	1
1	0	1	1
1	1	1	0

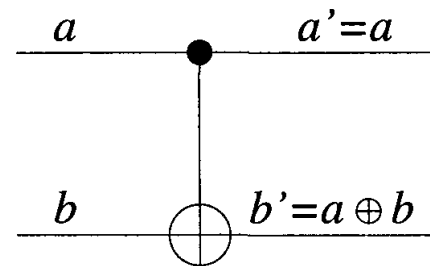

- It is easy to check that **CNOT is self-inverse**:
  - Indeed, the application of two CNOT gates, leads to
 
$$(a, b) \rightarrow (a, a \oplus b) \rightarrow (a, a \oplus (a \oplus b)) = (a, b)$$
  - Therefore,  $(\text{CNOT})^2 = I$ , that is  $\text{CNOT}^{-1} = \text{CNOT}$

# Multi-Qubit gates: Controlled gates

## Generic controlled gates

- The operation performed by the generic single-qubit gate  $U$  can be represented by using the generic matrix

$$U = \begin{bmatrix} u_{00} & u_{01} \\ u_{10} & u_{11} \end{bmatrix}$$

- If the action of  $U$  on the target qubit must be taken only if the first qubit is equal to  $|1\rangle$ , the controlled- $U$  gate it holds that:

$$\text{controlled } U = CU = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & u_{00} & u_{01} \\ 0 & 0 & u_{10} & u_{11} \end{bmatrix}$$

- Note that all the single qubit gates previously presented can be theoretically implemented in the **controlled version**

# Multi-Qubit gates: Controlled gates

- We can write the action of CU for all the four possible input patterns and observe the action when the control qubit is  $|1\rangle$

$$\textcolor{red}{CU|00\rangle} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & u_{00} & u_{01} \\ 0 & 0 & u_{10} & u_{11} \end{bmatrix} \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix} = |00\rangle \quad \textcolor{red}{CU|01\rangle} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & u_{00} & u_{01} \\ 0 & 0 & u_{10} & u_{11} \end{bmatrix} \begin{bmatrix} 0 \\ 1 \\ 0 \\ 0 \end{bmatrix} = \begin{bmatrix} 0 \\ 1 \\ 0 \\ 0 \end{bmatrix} = |01\rangle$$


$$\textcolor{red}{CU|10\rangle} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & u_{00} & u_{01} \\ 0 & 0 & u_{10} & u_{11} \end{bmatrix} \begin{bmatrix} 0 \\ 0 \\ 1 \\ 0 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \\ u_{00} \\ u_{10} \end{bmatrix} = |1\rangle \otimes U|0\rangle$$

$$\textcolor{red}{CU|11\rangle} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & u_{00} & u_{01} \\ 0 & 0 & u_{10} & u_{11} \end{bmatrix} \begin{bmatrix} 0 \\ 0 \\ 0 \\ 1 \end{bmatrix} = \begin{bmatrix} 1 \\ 0 \\ u_{01} \\ u_{11} \end{bmatrix} = |1\rangle \otimes U|1\rangle$$


# Multi-Qubit gates: Swap gate

- The **Swap gate** allows to swap two qubits
- It is defined as follows:

$$SWAP = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

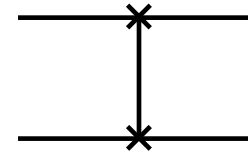

- In general, the action is:  $|\psi'\rangle = SWAP|\psi\rangle = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} a \\ b \\ c \\ d \end{bmatrix} = \begin{bmatrix} a \\ c \\ b \\ d \end{bmatrix}$
- The **SWAP gate** is that it can be implemented, for example, using **three CNOT gates**

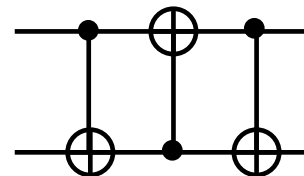

# Multi-Qubit gates: CCNOT gate


- It is possible to show that **two-bit reversible gates are not enough** for **universal computation**
- Instead, a universal gate is the **controlled-controlled-NOT (CCNOT)** or **Toffoli gate**, which is a three-bit gate
- The Toffoli gate has **two control qubits** and **one target qubit**
- The **X operation** is applied to the target qubit if and only if **both control qubits are set to  $|1\rangle$**

# Multi-Qubit gates: CCNOT gate

- The **CCNOT** gate acts as follows:
  - the **two control bits are unchanged**, that is  $a' = a$  and  $b' = b$
  - the **target bit is flipped** if and only if the two control bits are set to 1, that is  $c' = c \text{ xor } ab$

## Table and circuit of the CCNOT


$a$	$b$	$c$	$a'$	$b'$	$c'$
0	0	0	0	0	0
0	0	1	0	0	1
0	1	0	0	1	0
0	1	1	0	1	1
1	0	0	1	0	0
1	0	1	1	0	1
1	1	0	1	1	1
1	1	1	1	1	0

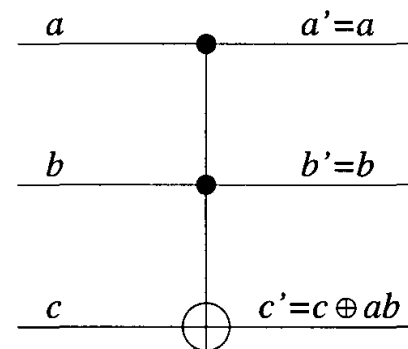

# Multi-Qubit gates: CCNOT gate

- The **CCNOT** gate (Toffoli gate) is **universal**
- To prove the CCNOT **universality**, we show how to use it to construct **both NAND and FANOUT gates**
  - If we set  $a = 1$ , the Toffoli gate acts on the other two bits as a CNOT and we have seen that the FANOUT gate can be constructed from the CNOT
  - Since  $c' = c \oplus ab = \bar{c}ab + c\bar{a}\bar{b}$ , if we set  $c = 1$ , then  $c' = 1 \oplus ab = 0ab + 1\bar{a}\bar{b} = \bar{a}\bar{b}$

$a$	$b$	$c$	$a'$	$b'$	$c'$
0	0	0	0	0	0
0	0	1	0	0	1
0	1	0	0	1	0
0	1	1	0	1	1
1	0	0	1	0	0
1	0	1	1	0	1
1	1	0	1	1	1
1	1	1	1	1	0

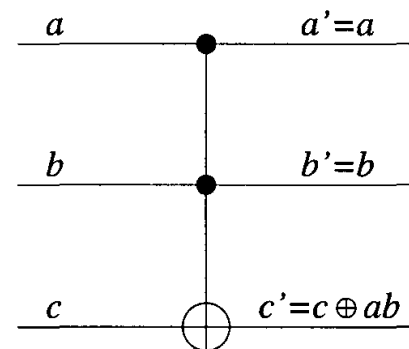


# Multi-Qubit gates: CSWAP gate

- Another universal reversible gate is the **controlled-EXCHANGE gate** or **CSWAP gate** or **Fredkin gate**
- The SWAP operation is performed **if and only if** the control bit  **$a$**  **is set to 1** and the two target qubits  $b$  and  $c$  are **swapped**

## Table and circuit of the controlled-EXCHANGE

$a$	$b$	$c$	$a'$	$b'$	$c'$
0	0	0	0	0	0
0	0	1	0	0	1
0	1	0	0	1	0
0	1	1	0	1	1
1	0	0	1	0	0
1	0	1	1	1	0
1	1	0	1	0	1
1	1	1	1	1	1

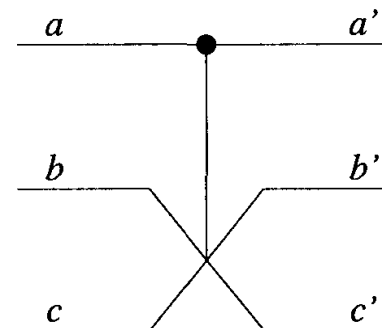



# Multi-Qubit gates

- Both the **Toffoli** and **Fredkin** gates are **self-inverse**
- The price to pay to have **irreversible gates** is the introduction of additional bits and on output this produces **garbage** bits
- **Garbage bits**
  - are **not reused** during the computation
  - are needed to **store the information** that would allow us **to reverse the operations**
  - For instance, if we set  $c = 1$  at the input of the Toffoli gate, we obtain  $c' = \overline{ab}$  plus two garbage bits  $a' = a$  and  $b' = b$

# QUANTUM CIRCUITS

---

# Quantum circuit

- **Quantum operators** are described by means of **unitary matrices**
- A **quantum circuit** can be seen as **set of gates** connected to each other, where each gate is represented by a unitary matrix
- There can be two kinds of connections between gates belonging to the same circuit: **series** and **parallel** connections
- To understand the **behavior of a given circuit**, it is necessary to understand how to compute the **overall unitary matrix** describing the action of gates placed in parallel or in series


# Quantum circuit

- The **time-flow in a circuit** is represented **from left to right**
- This means that the **evolution of the state of a qubit** has a physical meaning if considered from left to right
- However, when the matrix transfer function of the whole (or a part of the) circuit has to be computed, **unitary matrices must be written from right to left**
  - The **leftmost gate** in the circuit is described by the **rightmost unitary matrix**

# Quantum circuit

## Gates Connected in Series

- The overall transfer function of two generic one-qubit quantum gates connected in series can be computed as shown in the figure below

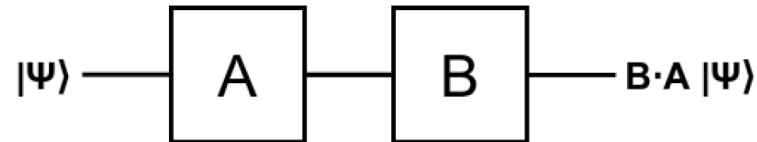

- The output after the input passed through gate A and B is:


$$|\psi\rangle = BA|\psi\rangle$$

- The method can be extended to an arbitrary number of gates

# Quantum circuit

## Gates Connected in Parallel

- When two gates are placed in parallel, the **overall unitary matrix** acting on the **two qubits** is obtained using the **Kronecker product**, as shown in the figure below

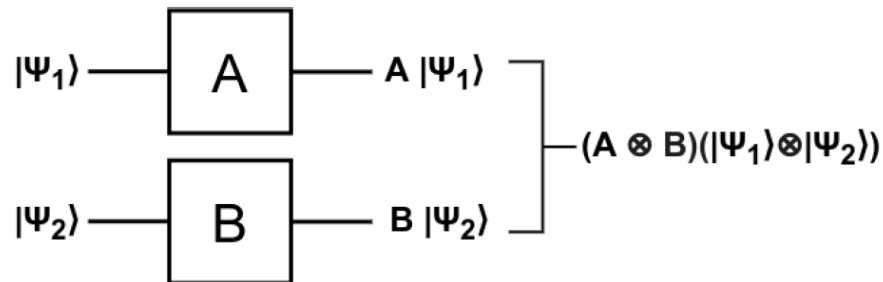

- The output after the inputs passed through gates A and B is:  


$$A|\psi_1\rangle \otimes B|\psi_2\rangle = (A \otimes B)(|\psi_1\rangle \otimes |\psi_2\rangle) = (A \otimes B)|\psi_1\psi_2\rangle$$
- The method can be extended to an arbitrary number of gates

# One-Qubit gates on multi-Qubit

## Example

- We have that a **single bit gate** acts on a **qubit in a multi-qubit vector** using the **tensor product** to calculate matrices that act on multi-qubit statevectors
- For **example**, if **on  $q_1$**  acts the **X-gate** (NOT) and **on  $q_0$**  acts the **H-gate** we can represent the **simultaneous operations  $X$  and  $H$**  using their **Kronecker product**:


$$X|q_1\rangle \otimes H|q_0\rangle = (X \otimes H)|q_1q_0\rangle$$

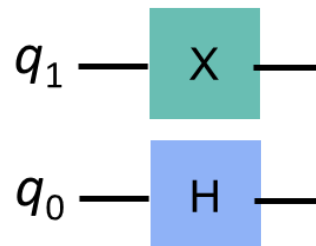

# One-Qubit gates on multi-Qubit

- The **operation**  $X|q_1\rangle \otimes H|q_0\rangle = (X \otimes H)|q_1q_0\rangle$  is given by:

$$\begin{aligned}
 X \otimes H &= \begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix} \otimes \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} = \\
 &= \frac{1}{\sqrt{2}} \begin{bmatrix} 0 \times \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} & 1 \times \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \\ 1 \times \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} & 0 \times \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 0 & 0 & 1 & 1 \\ 0 & 0 & 1 & -1 \\ 1 & 1 & 0 & 0 \\ 1 & -1 & 0 & 0 \end{bmatrix} = \begin{bmatrix} 0 & H \\ H & 0 \end{bmatrix}
 \end{aligned}$$

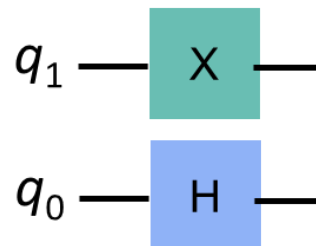




# One-Qubit gates on multi-Qubit

## Gates Connected in Parallel

- If gates are applied only to a subset of the inputs, qubits where no gates are acting can be treated as operated by an identity, as shown in the figure below

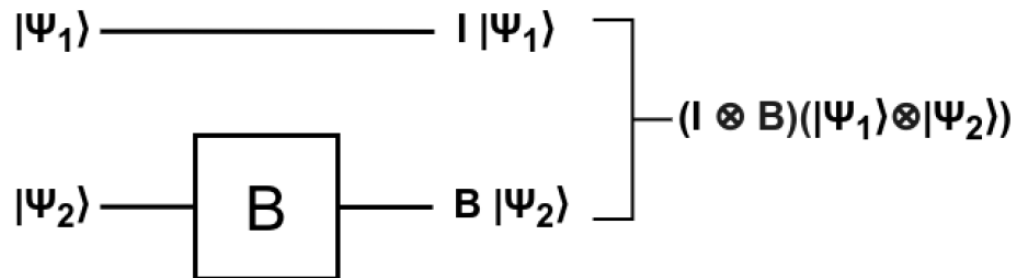


- The output after the inputs passed through gate  $B$  is:  

$$|\psi_1\rangle \otimes B|\psi_2\rangle = (I \otimes B)(|\psi_1\rangle \otimes |\psi_2\rangle) = (I \otimes B)|\psi_1\psi_2\rangle$$

# One-Qubit gates on multi-Qubit

## Example

- We need to **apply a gate to only one qubit** at a time, such as in the circuit below where **on  $q_1$**  acts the **X-gate** (NOT)

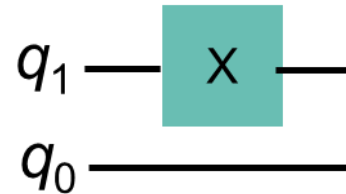

- In such a case, we describe the operation using **Kronecker product with the identity matrix**, e.g.:  $X \otimes I$ , giving


$$X \otimes I = \begin{bmatrix} 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \\ 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \end{bmatrix} = \begin{bmatrix} 0 & I \\ I & 0 \end{bmatrix}$$

# HOW TO ANALYZE QUANTUM CIRCUITS

---

# Example of a circuit

- Let us consider the following circuit, where A, B, C and D represent generic gates

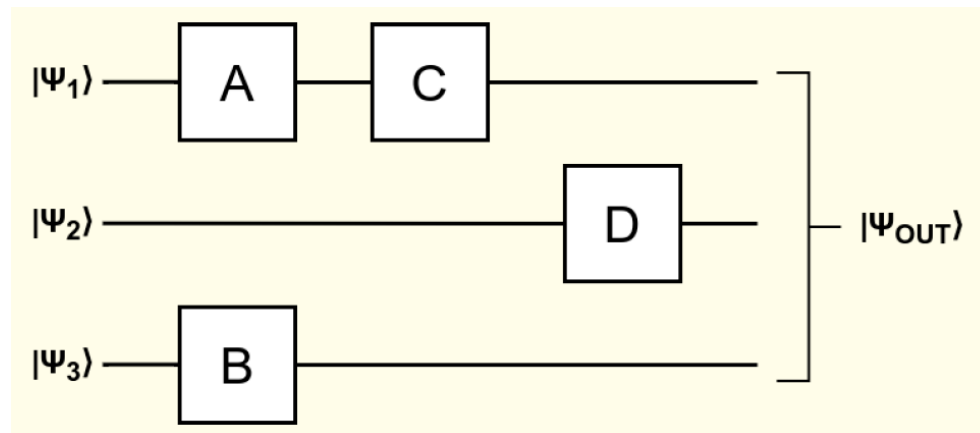

- To analyze this circuit, two steps have to be followed


# Example of a circuit

- 1) Write a unique expression for the three input qubits by performing the tensor product among them:

$$|\psi_1\rangle \otimes |\psi_2\rangle \otimes |\psi_3\rangle = |\psi_1\psi_2\psi_3\rangle$$


- 2) Compute the overall matrix function considering the gates from right to left (where  $I_k$  is the identity matrix of order  $k$ ):

$$|\psi_{out}\rangle = (I_2 \otimes D \otimes I_2) \cdot (C \otimes I_4) \cdot (A \otimes I_2 \otimes B) |\psi_1\psi_2\psi_3\rangle$$

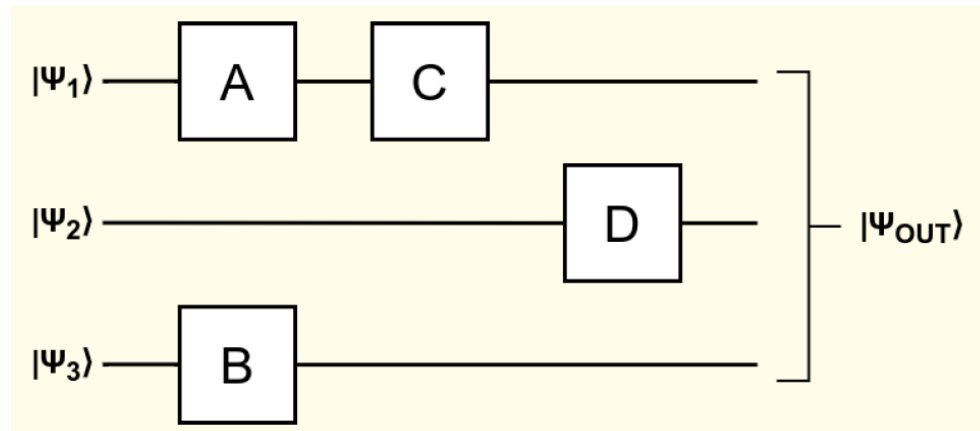


# Example of a circuit

- The step-by-step analysis is shown here below

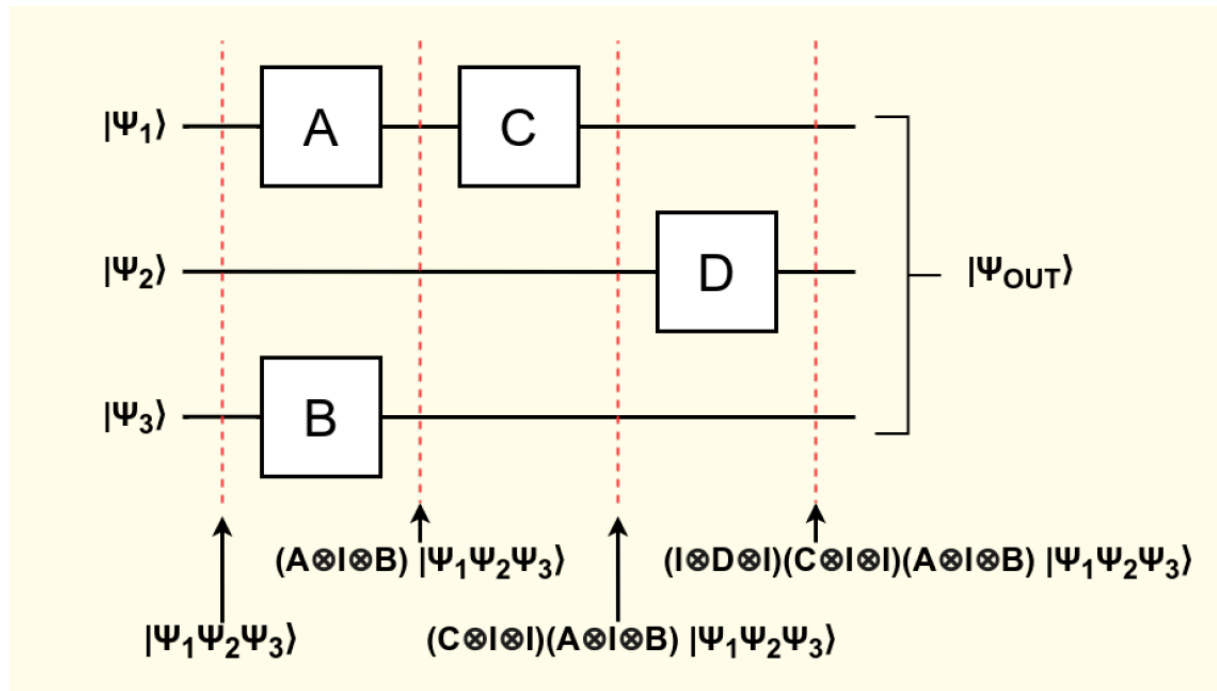

# Example with H and CNOT gates

- In real quantum circuit analysis, we can follow two different strategies:
  - Exploiting the **matrix calculation**, as done before
  - Adopting a method based on **truth tables** of different gates, that can be faster
- Let us consider the circuit below

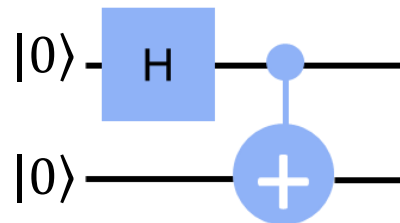


# Example with H and CNOT gates

## Matrix multiplication

- In this circuit we have two operators: the Hadamard gate and the CNOT gate, represented by the two unitary matrices

$$H = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \quad \text{CNOT} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 1 & 0 \end{bmatrix}$$

- We compute  $|q_1\rangle$ ,  $|q_2\rangle$  and  $|q_3\rangle$  corresponding to the values shown in the figure

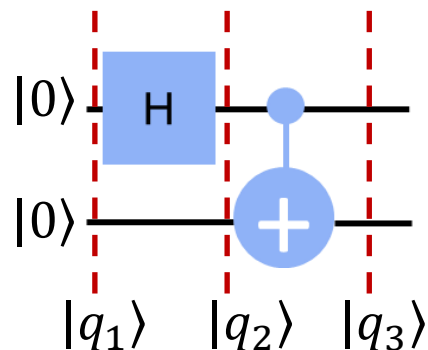




# Example with H and CNOT gates

## Matrix multiplication

$$\bullet |q_1\rangle = |0\rangle \otimes |0\rangle = |00\rangle = \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix}$$

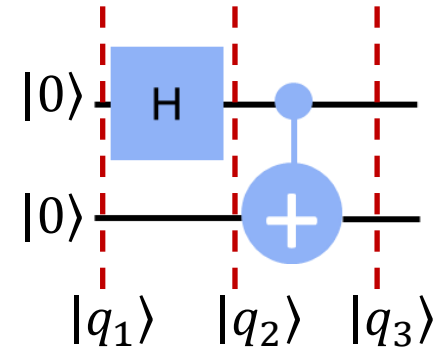


$$\bullet |q_2\rangle = (H \otimes I)|00\rangle = \left( \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \otimes \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix} \right) \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix} =$$

$$\frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 0 & 1 & 0 \\ 0 & 1 & 0 & 1 \\ 1 & 0 & -1 & 0 \\ 0 & 1 & 0 & -1 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \\ 1 \\ 0 \end{bmatrix} = \frac{1}{\sqrt{2}} (|00\rangle + |10\rangle)$$

# Example with H and CNOT gates

## Matrix multiplication

$$\bullet |q_3\rangle = CNOT \cdot \frac{1}{\sqrt{2}} (|00\rangle + |10\rangle) =$$

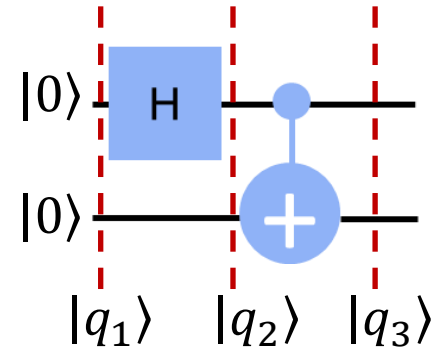


$$\begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 1 & 0 \end{bmatrix} \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \\ 1 \\ 0 \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \\ 0 \\ 1 \end{bmatrix} =$$

$$\frac{1}{\sqrt{2}} (|00\rangle + |11\rangle)$$

# Example with H and CNOT gates

- We can look at this circuit also in a different way

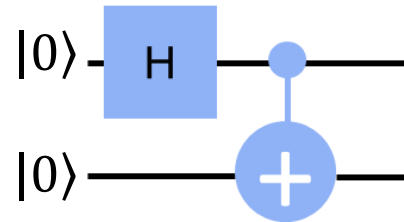

- Applying the H gate to  $|0\rangle$  we obtain state  $|+\rangle$


$$H|0\rangle = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 1 \end{bmatrix} = \frac{1}{\sqrt{2}} (|0\rangle + |1\rangle) = |+\rangle$$

- So, we can see how CNOT gate acts on a **qubit in superposition** given by the state  $|+\rangle$

# Example with H and CNOT gates

- Before we apply the CNOT we have

$$\begin{aligned}
 | + 0 \rangle &= | + \rangle \otimes | 0 \rangle = H| 0 \rangle \otimes | 0 \rangle = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 1 \end{bmatrix} \otimes \begin{bmatrix} 1 \\ 0 \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \times \begin{bmatrix} 1 \\ 0 \end{bmatrix} \\ 1 \times \begin{bmatrix} 1 \\ 0 \end{bmatrix} \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \\ 1 \\ 0 \end{bmatrix} \\
 &= \frac{1}{\sqrt{2}} \left( \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ 1 \\ 0 \end{bmatrix} \right) = \frac{1}{\sqrt{2}} (| 0 0 \rangle + | 1 0 \rangle)
 \end{aligned}$$

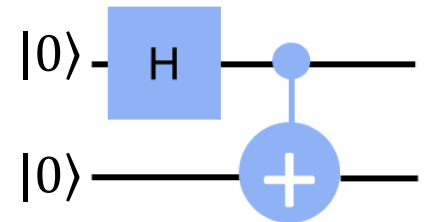

- When we **apply the CNOT gate**, we have the state

$$\begin{aligned}
 \text{CNOT} | + 0 \rangle &= \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 1 & 0 \end{bmatrix} \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \\ 1 \\ 0 \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 \\ 0 \\ 0 \\ 1 \end{bmatrix} = \frac{1}{\sqrt{2}} \left( \begin{bmatrix} 1 \\ 0 \\ 0 \\ 0 \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ 0 \\ 1 \end{bmatrix} \right) \\
 &= \frac{1}{\sqrt{2}} (| 0 0 \rangle + | 1 1 \rangle)
 \end{aligned}$$

# Example with H and CNOT gates

## Truth tables

- The approach based on **truth tables** exploits the precomputed results that are listed in a table, as shown here below for the involved operators H and CNOT


Hadamard	CNOT
$H 0\rangle = \frac{1}{\sqrt{2}}( 0\rangle +  1\rangle) =  +\rangle$	$\text{CNOT} 0x\rangle =  0x\rangle$
$H 1\rangle = \frac{1}{\sqrt{2}}( 0\rangle -  1\rangle) =  -\rangle$	$\text{CNOT} 1x\rangle =  1\bar{x}\rangle$

- It is typically much quicker to apply than the matrix method

# Example with H and CNOT gates

## Truth tables

- $|q_1\rangle = |0\rangle \otimes |0\rangle = |00\rangle$

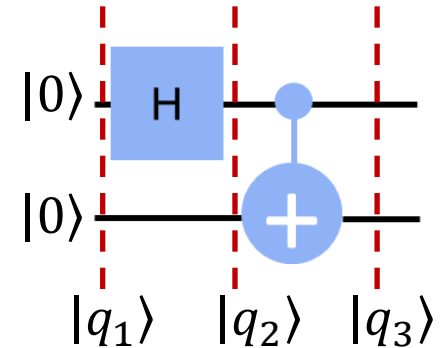


- $|q_2\rangle = H|0\rangle \otimes |0\rangle = \frac{1}{\sqrt{2}}(|0\rangle + |1\rangle) \otimes |0\rangle = \frac{1}{\sqrt{2}}(|00\rangle + |10\rangle)$

- $|q_3\rangle = CNOT(\frac{1}{\sqrt{2}}(|00\rangle + |10\rangle)) = \frac{1}{\sqrt{2}}(CNOT|00\rangle + CNOT|10\rangle) =$   
 $\frac{1}{\sqrt{2}}(|00\rangle + |11\rangle)$

# Entanglement with H and CNOT gates

- The circuit considered in the example produces one of the four **Bell states**

$$\text{CNOT}|+0\rangle = \frac{1}{\sqrt{2}} (|00\rangle + |11\rangle)$$

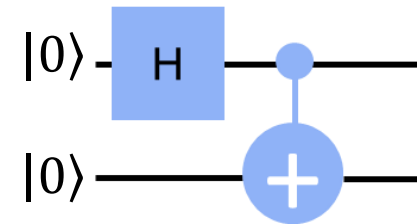


- As we said, this is an interesting state because the result is that the **two qubits are entangled** and we have:
  - 50%** probability of being measured in the state  $|00\rangle$
  - 50%** probability of being measured in the state  $|11\rangle$
  - And, most interestingly, it has a **0%** probability of being measured in the states  $|01\rangle$  or  $|10\rangle$
  - This combined state **cannot** be written as two separate qubit states

# Entanglement with H and CNOT gates

- Although our qubits are in superposition, measuring one will tell us the state of the other and **collapse its superposition**
- For example, if we measured the top qubit and got the state  $|1\rangle$  the **collective state of our qubits** changes like

$$\frac{1}{\sqrt{2}} (|00\rangle + |11\rangle) \xrightarrow{\text{measure}} |11\rangle$$

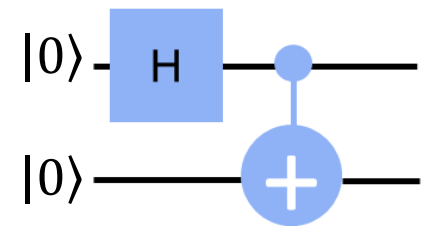

- Even ***if we separated these qubits*** light-years away, measuring one qubit collapses the superposition and appears to have an ***immediate effect on the other***